

Quickstart Guide

P900



Install ProViewer Software


- Insert the CD.
- Run Setup.
- If prompted, click "Do not block."

Configure your PC network interface card

- Set your PC Network IP address to 192.168.1.3.
- Set the Net Mask to 255.255.255.0.

Bench Test the Sonar

Connect the sonar as shown below, making sure the sonar cable is connected to the port labeled SONAR and the standard Ethernet cable to the port labeled PC on the POE Box.

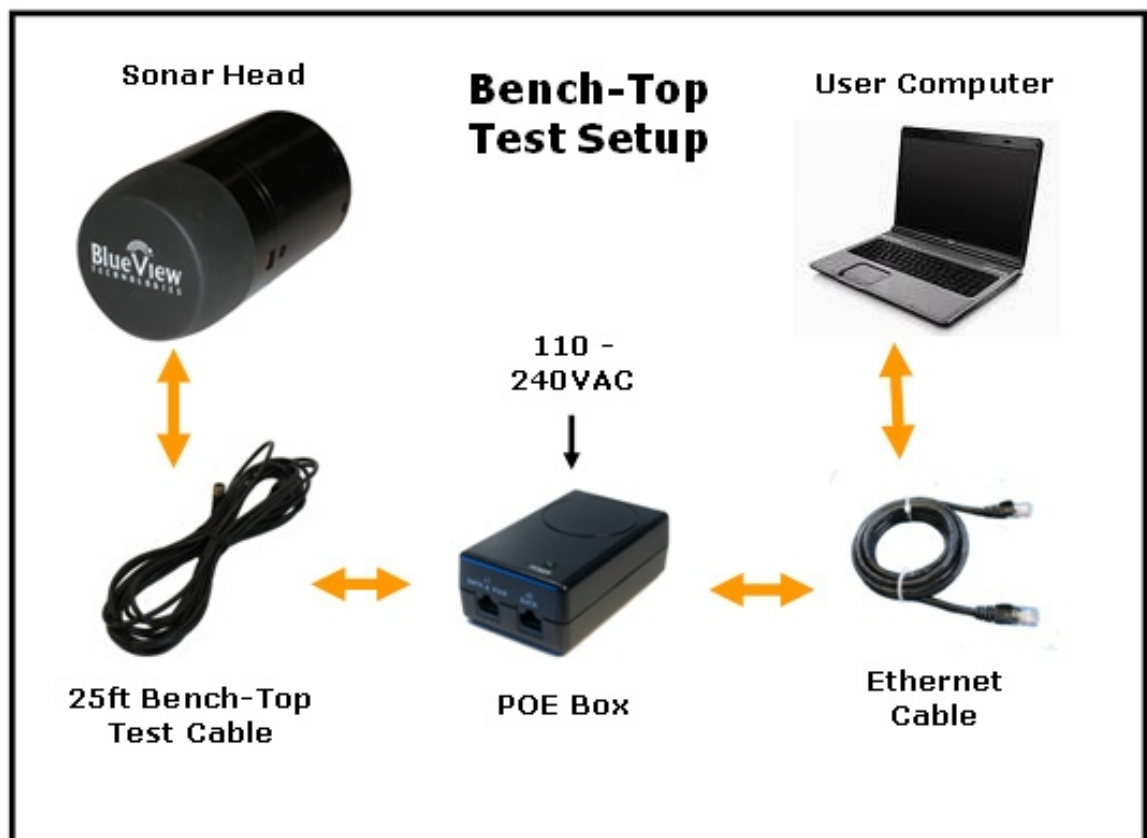


- Apply AC power to the POE Box.
- Start the ProViewer software.
- Once the sonar is fully powered up (approximately 45 seconds) click the connect button:



Mount the Sonar

The sonar images like a camera out the front of the nose cone. It should be mounted looking forward, preferably on the same pan-and-tilt as the ROV's main camera.

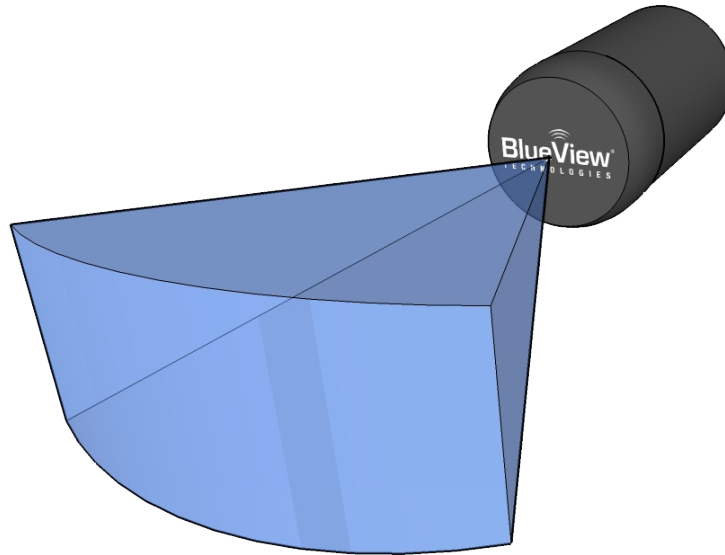

Shutdown

To avoid data loss, be sure to close and save any sonar data files before removing the sonar power.

When power cycling the sonar, be sure to allow at least 10 seconds of 'off time' before turning the sonar back on.

Comments

If you have any questions or comments, please contact us.

BlueView Technologies

www.blueview.com

(206) 545-7260